

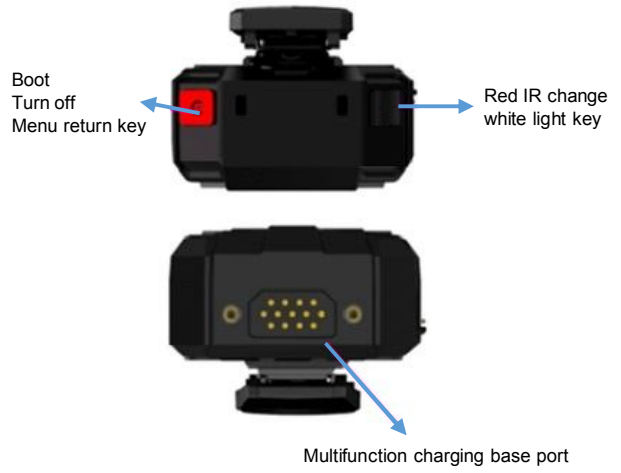 
Body Worn Camera User Manual

Product Overview

Body worn camera is a full HD video and audio recording device with excellent quality.

With IP65 waterproof and night vision ability, It can help you to collect high quality video and audio evidence under dark and rainy circumstances.

Appearance and Key Description



Display Screen Description



Product Specifications

Item	Parameter
Max Pixel	Over 21 Mega Pixels
Video Resolution	1920x1080 30p 1280x720 60p 1280x720 30p 848x480 60p 16:9
Display Screen	2 inch TFT-LCD HD Clear colour display screen
Wide Angle	140° wide-angle lens Image without deformity
Memory Capacity	Build-in 32G
Data Interface	HDMI 1.3 Support 1080p TV Output: NTSC
Continuous Recording Time	10 hours
Shoulder Microphone	Support all kinds of walkie-talkie
Positioning system (Optional)	GPS

BASIC OPERATIONS

Power On / Off Key

Short press to return to previous screen.

Short press to enter / exit standby mode.

Press and hold 4 seconds to turn the camera off.

Audio Recording Key

Short press to start / stop audio recording.

Press and hold 4 seconds to start recording while power-off.

Photo Taking Key

Short press to take photos when the camera is on standby.

Press and hold 4 seconds to enable LED flashlight.

Video Recording Key

Short press to start / stop video recording.

Press and hold 4 seconds to enable video recording while power-off.

Playback Key

Short press to review the last recorded video, audio or photo files.

Infrared / LED Light Key

Short press to enable / disable IR red light.

Press and hold 4 seconds to enable / disable LED white light.

OK Confirm Key

Short press to access video, photo and audio folders.

Press and hold 4 seconds to enable / disable auxiliary light

Menu Key

Short press to access the camera's menu settings.

Short press to select a file when browsing.

Add * On Important File Key

Short press to mark an important file during playback.

Press and hold 4 seconds to access the 3 modes.

(Traffic Control / Investigation / Public Security)

Reset Key

Reboot the camera using a pin while pressing the reset key.


FUNCTIONS

Adjusting Focus


Press and hold  or  key to adjust the focus.

(Note: focus cannot be adjusted under FHD 1920*1080 video resolution)

Auxiliary Laser Pointer Location Light

Press and hold  key 4 seconds to enable / disable auxiliary laser pointer location light.

Changing Video Resolution

 
 
Press and hold  key for 4 seconds to switch between 1080x720P30 and 848X480P30 resolution.

Charging (Li-ion Rechargeable Battery)

Camera can be charged via USB connected to a computer or through multifunction base charging.

A full charge requires 4 hours and is completed when the blue indicator light turns off.

Fast Forward / Fast Reverse


Press and hold  or  key to fast forward or fast reverse during playback.


Power Saving Mode

Screen will enter standby mode if the camera is inactive for too long.


This option can be enabled / disabled in the main menu settings.

Video Snapshot

Short press  key to capture a photo during video recording.

Long press  key to activate flicker light.

Walkie-talkie

Short press  key to talk after connecting the camera to a walkie-talkie.

ALARMS

Insufficient Battery Alarm

Indicates that the camera's battery life is running low and requires charging.

Storage Full Alarm

Indicates that the camera's memory is running low and requires backing up of the files to free up the memory.

PORTS

USB Port

Connect this port to a computer using a cable to access the files and charge the camera.

HDMI Port

Connect this port to a HD TV to playback the files.

AV Port

Connect this port to an external camera to access the files on its screen.

INDICATOR LIGHT

Standby Indicator Light

Light turns green when camera power on.

Charge Indicator Light

Light turns blue when charging camera.

Light turns off when charging is completed.

Video Recording Indicator Light

Light turns red and flashing when recording video.

Audio Indicator Light

Light turns yellow and flashing when recording audio.

ATTENTION

Fully charge the camera before first time use.

Do not attempt to open / repair the camera by an unauthorized personnel.

Prevent the bottom of the camera from being wet during Charging.